

Sony WH-CH720N Headphones

Download the Sony Sound app to customize settings

<https://www.sony.ca/en/electronics/support/wireless-headphones-bluetooth-headphones/wh-ch720n/software/00269130>

Power/Pairing button

Bottom button on left earcup.

ON/OFF

Usage hours

Charging time

Enter Pairing mode

Note: There is a tactile dot on the back of the left earcup

Press and hold the button for 2 seconds.

Auto-off if not worn for 15 minutes.

26-38 hours


3.5 hours (at 1.5A)

Press and hold for 5 seconds

Indicator light flashes blue

Can connect to 2 devices simultaneously.

Range is approximately 30 ft

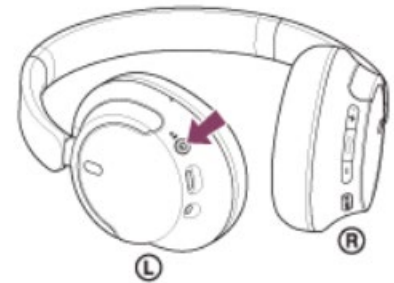

Noise Cancelling (NC) and Ambient Sound (AMB) button

Bottom button on the right earcup.

Press the NC/AMB button to cycle through the different functions.

Ambient Sound: ON

Hear and slightly amplify noises around you

Noise Cancelling: ON

Cancels out ambient sound around you

NC and AMB: OFF

Turns off Ambient Sound and Noise Canceling.

Settings for these functions can be changed in the Sony Sound app.

