

Bose NC 700 Headphones

Download the Bose music app to customize settings



[Apple](#)



[Android](#)

Power button

Top button on right earcup

Also used to connect to devices

Auto-off if there is no movement for 1 hour

Gestures

Gestures are done on the front portion of the right earcup

Play/Pause – Double-tap

Volume – Swipe up or down

Next/Previous track – Swipe forward/backwards

Battery level – tap and hold

Answer/End call – double tap

Decline call – tap and hold for 1 second

Noise Cancelling button

Press button on left earcup to cycle through favourites (Default is 10, 5 0)

Press and hold the button to change to Conversation Mode (Audio pauses and NC is turned off)

Can change in settings app

Voice Assistant button

Bottom button on right earmuff

Press and hold to use voice control

Press and release to mute microphone during a call

